



Quality Since 1946

able sheet metal

Corporate Office Location:
614 N. Ford Blvd.
Los Angeles, CA 90022-1107

Shipping & Receiving:
4532 Floral Dr.
Los Angeles, CA 90022-1103

Northern California Location:
14111 Catalina St.
San Leandro, CA 94577-5540

TEL: (323) 269-2181

TOLL FREE: (800) 699-2253

TEL: (510) 483-9966

FAX: (323) 269-2184

www.ablemetal.com

FAX: (510) 483-9960

Low-Profile / Eyebrow / Glider Vents: How to Install



Mark vent locations

Center nails between rafters away from the roof's peak. Drive nails up through the sheathing and shingles to mark vent locations.



Cut the shingles

Cut shingles with a utility knife. Make the cutout area 1/2 inch larger than the vent opening. Chalk provides an easy-to-see cutting line.




Cut the hole

Cut a hole in the roof sheathing with a jigsaw or reciprocating saw. Drill a starter hole so you can insert the blade to begin the cut.




Remove any obstructions

Slip a pry bar between the shingles and separate the self-sealing adhesive. Then remove any shingle nails that prevent the vent from sliding into place.

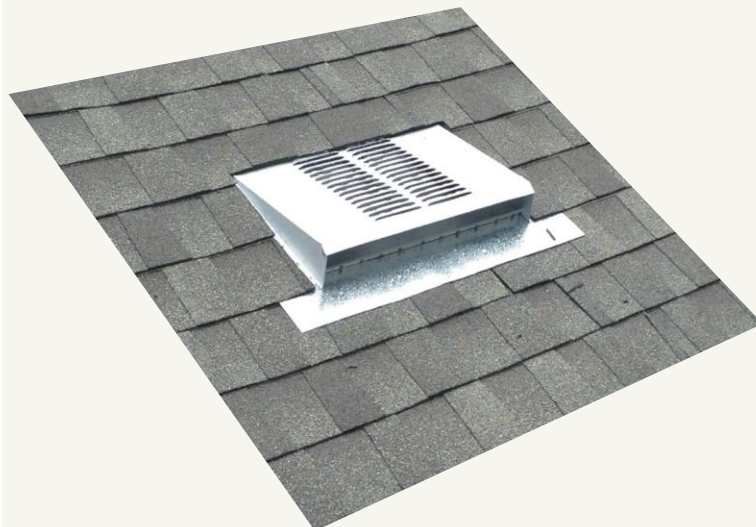

Place the vent

Slide the vent into place.

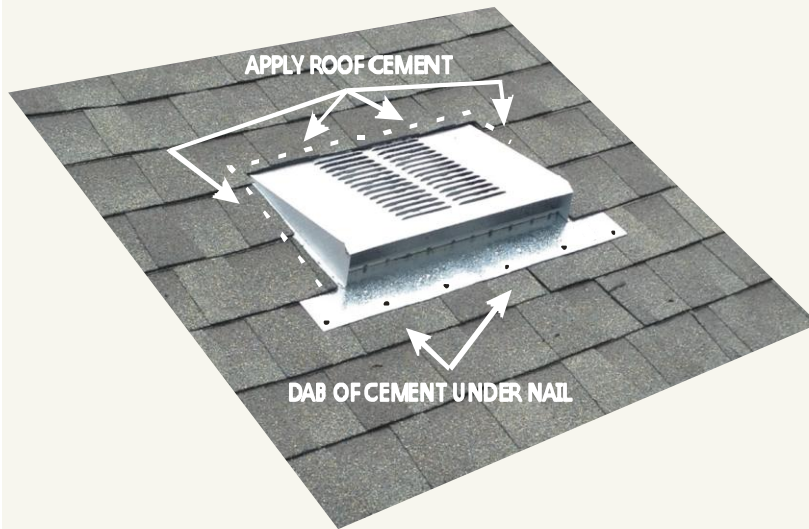

Install the vent

Nail the lower edge with roofing nails. Add a dab of cement to secure the shingles to the vent base. Apply roof cement (or appropriate caulking) where shingles meet the vent (as shown on pages 3 and 4). Usage of sub-bases is optional.